

Setting up Your Hargray Television Equipment


Explorer® SD Set Top Box Instructions



1.877.HARGRAY


 **HARGRAY**
Do More
ter.

Internet | Television | Telephone

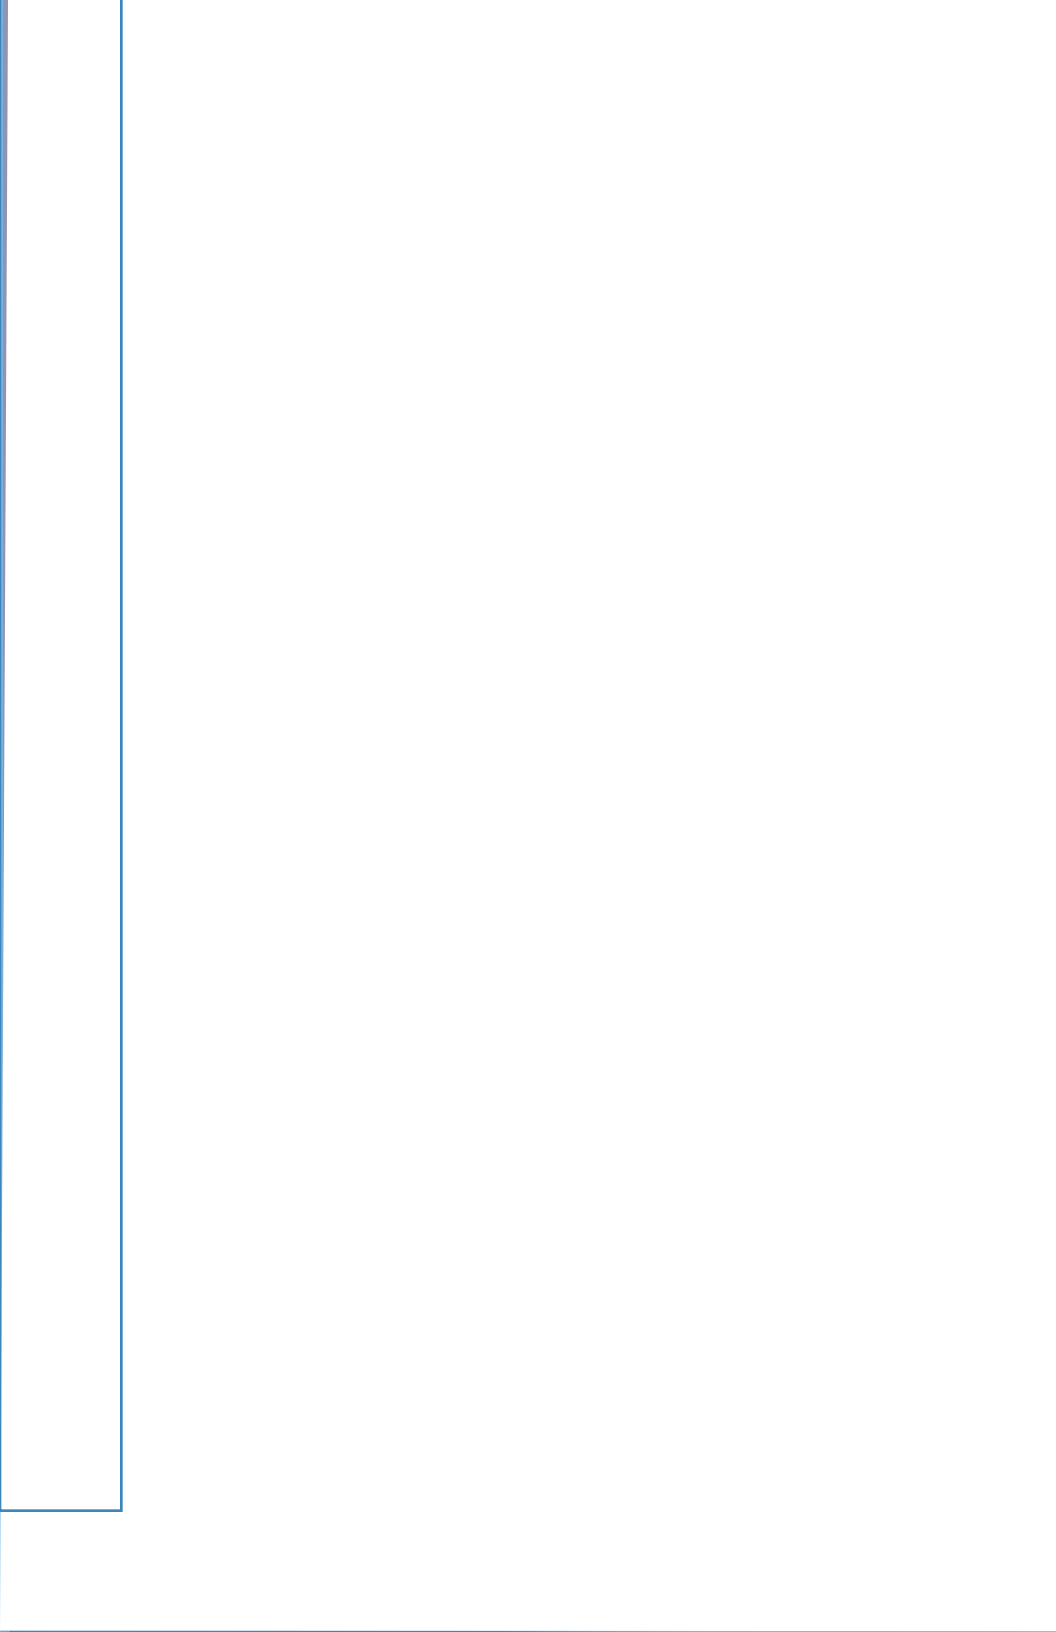


Connecting to a Stereo TV

Explorer SD Set Top Box

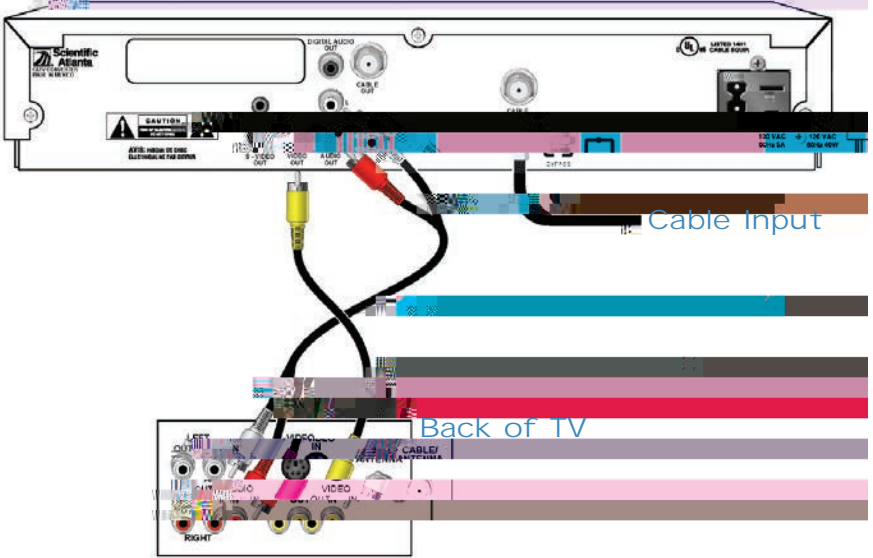

Connecting to a Stereo TV and Stereo VCR

Explorer SD Set Top Box

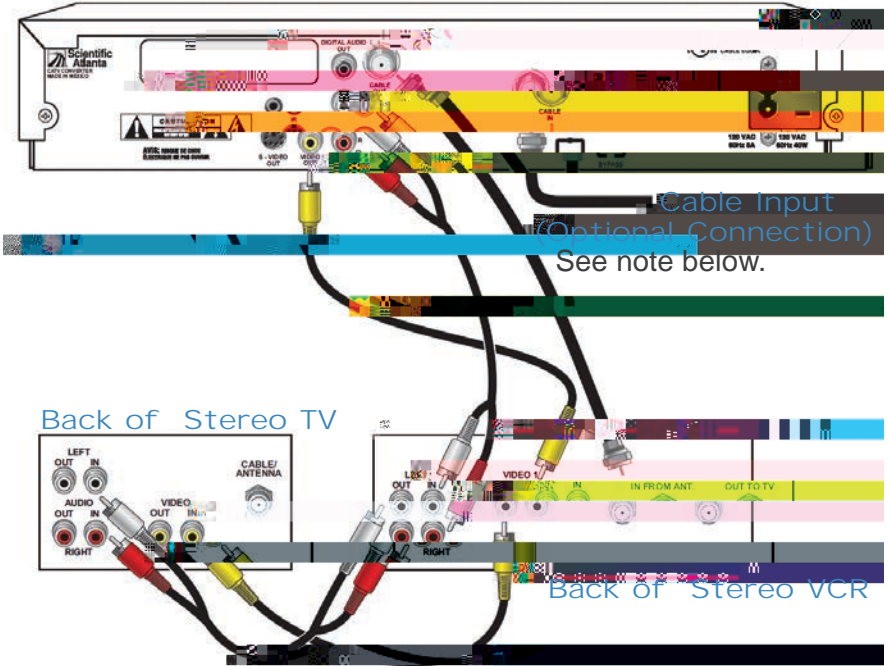

Note:


If your VCR and/or TV do not have stereo connections, an RF connection used alone will provide monaural audio.

Connecting to a Stereo TV, Stereo VCR and DVD Player

Explorer SD Set Top Box




Back of DVD Player

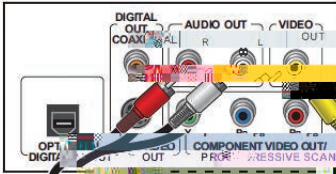


Cable Input (Optional Connection)

Note: This connection is optional and if used without the other audio/video connections, it will provide monoaural audio.

Back of Stereo TV

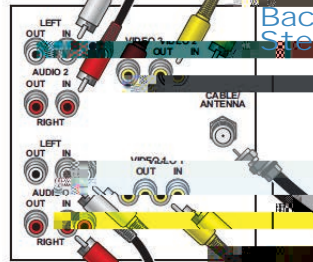


Back of Stereo VCR

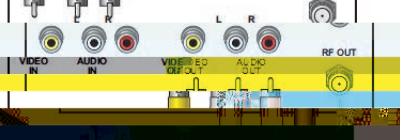

Connecting to a Stereo TV, Home eater and Stereo VCR

Explorer SD Set Top Box

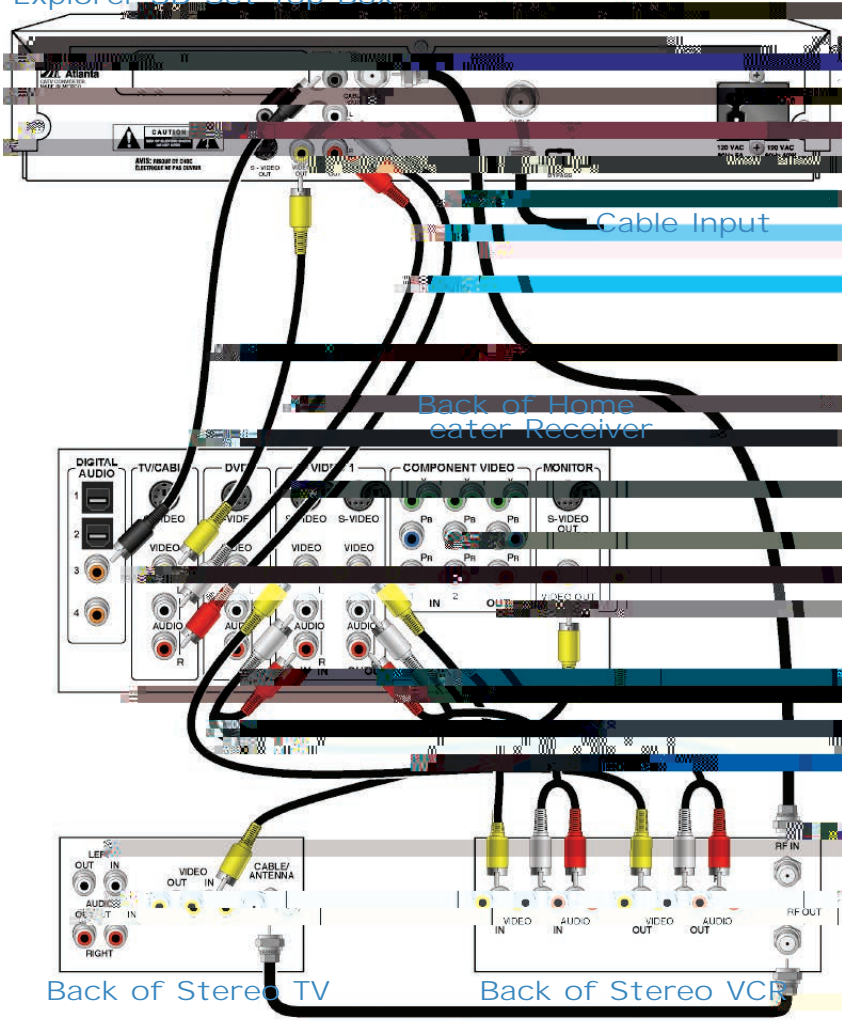

Note:

Please refer to your home theater receiver's owner's manual for detailed information.

Instructions for Activating Your Service Via Phone

In order to activate your service over the phone, call us toll-free at our automated equipment activation line at 866.531.0177. You will be prompted by the automated system to enter your 10-digit account number from your Hargray bill. Please note that it may take up to 30 minutes for the activation to complete.

If you experience any difficulties and require additional technical support, feel free to contact our local support professionals at 843.686.1135.

