

This product may contain disposable batteries. Heed the following warning and follow the Battery Safety and Battery Disposal

Kontakt
Koppel
Kortling
Kosmos

1601 2711 1661
0811
0061
1371 5101
0061 0471 0201

2521
2341
1011
0281
0861 0061

0861

S

0061
0861
0751
0081
0281
1061

U ve a
U ve s

Battery Safety

- Insert ba
- There ma
- Do not expose batteries to excessive heat (such as sunlight or fire).
- Do not expose batteries to temperatures above 100°C (212°F)

This device complies with Part

Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and

0471 1521
0561
0561 0731
0281
0021

0
02
0661
0891
0671
0121
0231

S

5121



cisco

The Keys Including:

Welcome

Check the TV Code List

JMB

Important Information About Your Remote

The remote control is initially programmed for DTA only. If you want to program a TV into the remote, you need to go to Program The Remote to control your TV.

A.R. Systems